Zooper / USA
Lan Enterprises, LLC
10140 SW Allen Blvd., Suite E
Beaverton, OR 97005
Toll Free number:1-888-742-9899
FAX: 503-352-0929
E-mail: info@zooper.com
Web: www.zooper.com

Zooper / Canada
Peter John M. Distributions, Inc.
88 SW Marine Dr.
Vancouver, BC
Canada
V5X 2R1
Tel: 1-888-597-0992
E-mail: info@zooperbabycanada.com

⚠WARNINGS

IMPORTANT CARE AND SAFETY INFORMATION

- Avoid serious injury from falling or sliding out, always use safety harness provided.
- Always engage the rear brakes when not holding onto your stroller.
- Never leave your child unattended.
- Never use the stroller near an open fire or exposed flame.
- Never allow the stroller to be used as a toy.
- Never allow more than one child at a time in the stroller.
- Never hang bags or other items from the handle or on the canopy. This may cause the stroller to become unstable.
- Never use the stroller on stairs or escalators.
- Do not overload the basket. Maximum load is 7 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- Do not overload the canopy pocket: Maximum load is 2 lbs. Excessive weight may create a hazardous unstable condition to exist.
- Before each use, check to make sure the stroller is set up properly and that all the wheels are properly and securely attached.
- This stroller is not recommended for use with a child over 40 lbs.
- This stroller is designed as a walking stroller. We do not recommend running, roller blading, or other such activities with this stroller.
- This stroller is a single stroller do not use any attachments that allow for a second child.
- It may be unsafe to use accessories other than those approved by the manufacturer or distributor.

MAINTENANCE

- Do not fold your stroller when wet.
- Machine wash removable seat and armrest covers using gentle cycle, cold water, and a mild detergent. The canopy can only be spot washed.
- Line dry fabric parts.
- Never use bleach when washing.
- Do not leave your stroller in direct sunlight for extended periods of time.
- Clean and lubricate all moving parts on the stroller frame and wheels as needed. Use only a penetrating silicon based lubricant.
- Regularly check for loose screws, broken parts, etc. Use only Zooper approved replacement parts available through the service centers listed below.
- Wipe off any sand, salt or other corrosive residue after each use where the stroller may be exposed to those elements.

In order to maintain the highest quality standards, the distributor reserves the right to improve or alter any Zooper stroller design without notice or obligation to any previous purchaser. For questions or service needs, please contact the service center located in your country of residence. Sending in your warrantee card will help expedite any service needs.

IMPORTANT: READ THESE SAFETY INSTRUCTIONS CAREFULLY BEFORE USING YOUR STROLLER AND KEEP THEM FOR FUTURE REFERENCE. THE SAFETY OF YOUR CHILD DEPENDS ON IT.

Thank you for choosing Zooper.

UNLOCKING & OPENING THE FRAME

To open the stroller, first lift up on the red colored frame lock located on the left side of the stroller, (Fig 1). Be sure the frame lock detaches from the metal locking pin. Then pull up on the main stroller handle while pushing down on the top of the secondary lock, (Fig 2). Using your hand, push down on the front edge of the seat to ensure the stroller frame has locked properly in the open position. Do not push down on the front armrest bar.

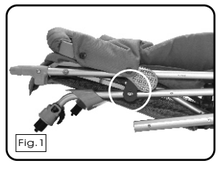

⚠ **WARNING:** Be sure children are at a safe distance and cannot reach moving parts whenever opening or closing the stroller.

FRONT WHEEL BLOCKS

Line up each front wheel block with the front leg and push firmly together (Fig. 6). Always check to see that the wheels have been properly installed by pulling out on the wheel block. It should be locked to the front leg. To remove, push in on the looped metal retention clip located on the underside of the wheel block, and pull the wheel block off.

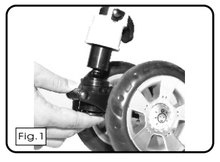

ATTACHING THE REAR AXLE & WHEELS TO THE FRAME

The rear wheels and rear axle come pre-assembled. Insert both plastic rear wheel housings onto the rear leg tubes of the stroller (Fig 4). Make sure the brake levers are facing out, away from the stroller. Then push in each locking spring located on the rear stroller tubes. Holding the locking pin in, slide each wheel block over the pin until it locks into place and the silver head of the locking pin can be seen protruding from the wheel housing (Fig 5).

Should there be a need to remove the rear wheel assembly, push in on the locking pins while pulling down on each wheel block.

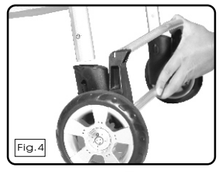

⚠ **WARNING:** Do not use the stroller if the brake levers are not facing away from the stroller and if the locking pins are not visible as described above. Contact the appropriate service center listed at the back of these instructions if you have questions.

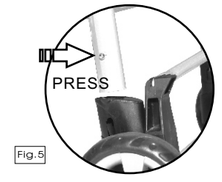

ADJUSTING THE SEATBACK

To lower the seatback, loosen the pull straps behind the seat (Fig.6). You may adjust the angle of the backrest by pulling or loosening the pull-straps. To recline the seatback to its lowest position, unsnap the plastic buckle between the pull-straps and gently pull the seatback down.

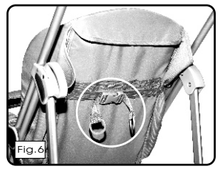

⚠ **WARNING:** Always keep your child in sight when making these kinds of adjustments. Check the fitting of the safety harness each time the backrest is adjusted to be sure a snug, yet comfortable fitting is maintained.

ATTACHING THE ARMREST TO THE STROLLER SEAT

To attach the armrest bar to the stroller seat, line up the two plastic inserts on the armrest bar with the armrest slots on both sides of the stroller seat. Slide the inserts completely into the slots, making sure that both sides snap into place. To remove the armrest bar, locate the plastic tabs beneath each armrest and push them in, one at a time, while pulling out on each side of the bar (Fig.7).

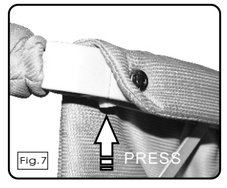

⚠ **WARNING:** Never pick up your stroller by the armrest.

SAFETY HARNESS

Zooper provides a special 5-point harness safety system. Used properly, this harness will keep your child seated and safe. To secure your child in the harness, push buckles (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust slider (D) to fit snugly and comfortably around your child see (Fig 8).Follow the same procedure to adjust the shoulder straps. Always re-tighten the harness when your child is in a sit up or lay back position.

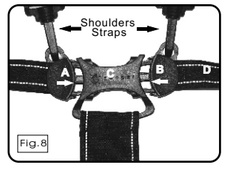

CLOSING THE STROLLER FOR TRAVEL OR STORAGE

Each time, before closing your stroller, check the following:

- Your child is clear of moving parts
- The rear brakes have been set
- The backrest is in the full upright position
- The front wheels are secure in the locked mode
- The canopy is retracted
- All items have been removed from the basket
- The safety scarf is discharged

To close the stroller, push in on the main folding lock located in the middle of the stroller handle. With the main lock held in, pull up on the secondary lock while easing the stroller handle down, (Fig 12). Check to be sure the red frame lock secures to the locking pin.

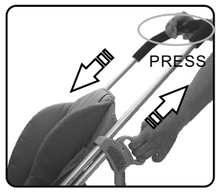

CANOPY

The canopy attaches onto the stroller frame above each side armrest (Fig. 9). Push firmly to install. Open the canopy by pushing down on the plastic side canopy braces. Be sure to snap the canopy to the sides of the seat and backrest fabric. Retract the canopy by first pulling up on the side braces then pushing the canopy hood back. The canopy can be converted to allow more air flow through the stroller. Unzip the lower half of the canopy from the upper half. This will leave a mesh cover that can snap to the back of the seat. To remove the canopy, first undo the snaps. Then press the release tabs, located on the plastic slots, while pulling up on the canopy shafts.

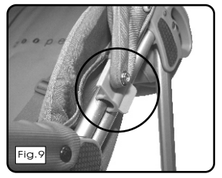

⚠ **WARNING:** Do not try to retract the canopy when the side canopy braces are fully open or with the sun visor extended. This may damage the canopy. Whenever the seatback is in the fully reclined position, make sure that the canopy snaps or mesh snaps are buttoned onto the back and sides of the seat fabric. Do not overload the canopy pocket: Maximum load is 2 lbs (1 kg). Excessive weight may create a hazardous unstable condition to exist.

USING THE BRAKES

To engage the brakes, step down on each rear brake lever located on each rear wheel. (Fig.10). The brake lever should be facing out. Always check that the brakes have fully engaged by pushing forward on the stroller to make sure it stays in place.Lift the brake levers with your foot to release the brakes.

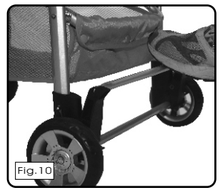

⚠ **WARNING:** Always engage the both brakes when you are not holding onto the stroller and check that the brakes have been properly engaged as described above. Always engage the brakes when putting your child in, or taking your child out, of the stroller.

zooper®

More than you think.

User Guide Ska SL830D/B